



Quick Guide

Ver. 4.0
Date of issue: IV 2026
901 Soft: v2.3
E901RF (TX) Soft v2.4
E901RF (RX) Soft v1.4



Producer:
Engo Controls sp z o.o. sp. k.
Rolna 4 St.
43-262 Kobielice
Poland

www.engocontrols.com

Introduction

Products are a weekly, surface-mounted electronic room thermostat intended for home use. It has been designed for control of heating devices (e.g. gas, oil boilers, heat pumps) or cooling devices. It has the function of creating your own schedules. Thanks to the built-in algorithms, it offers much better temperature control accuracy than traditional mechanical thermostats. Please read these instructions carefully before using the device for the first time. The thermostat should use AA, 1.5V alkaline batteries. Put the batteries in the battery compartment located under the flap. Rechargeable batteries are not allowed.

Product Compliance

This product complies with the following EU Directives:
E901: 2014/30/EU, 2014/35/EU, 2011/65/EU
E901RF: 2014/53/EU, 2011/65/EU (9) 868 MHz: 863–870 MHz, max. 13 dBm EIRP

Please note!

This document is a quick guide for installing and operating the product and indicates its most important features and functions.

Safety Information:

Use in accordance with national and EU regulations. Use the device only as intended, keeping it in a dry condition. The product is for indoor use only. Installation must be carried out by a qualified person in accordance with national and EU regulations.

Installation:

Installation must be performed by a qualified person with appropriate electrical qualifications, in accordance with the standards and regulations in force in a given country and in the EU. The manufacturer is not responsible for non-compliance with the instructions.


WARNING:

For the entire installation, there may be additional protection requirements, which the installer is responsible for.

Video tutorials




Wall mounting

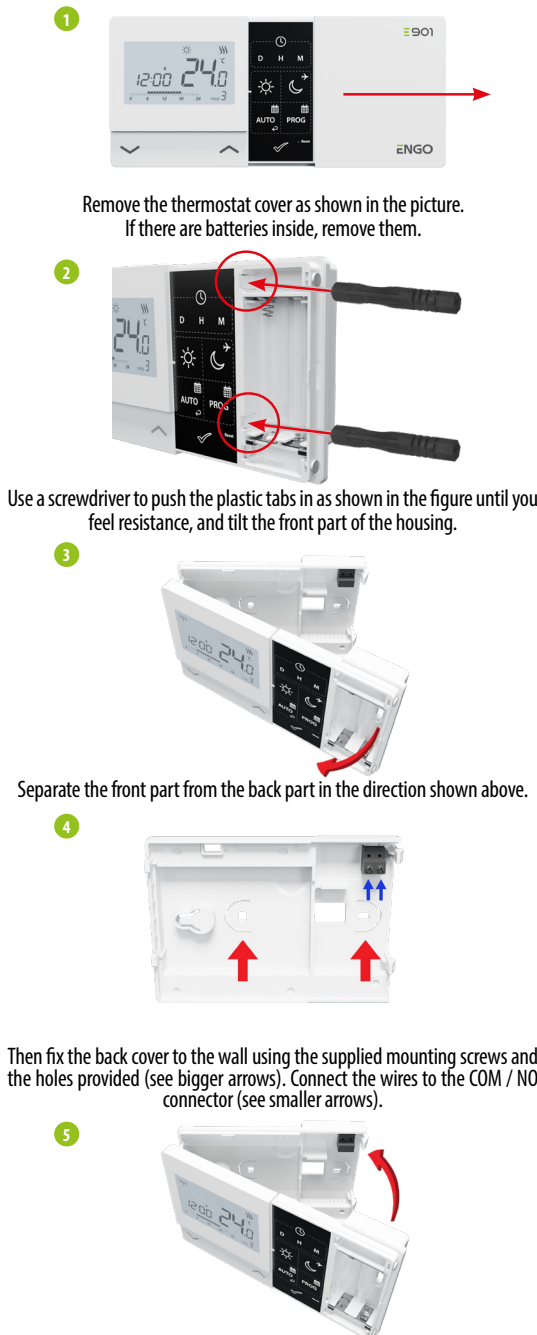


Using the hinges from left, fold the back and front covers by moving as shown in the picture above until they click into place.

Connection description for wired thermostat

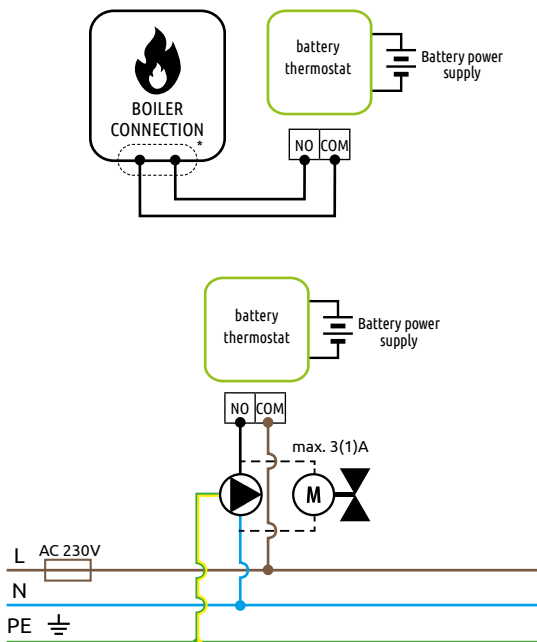


Receiver from the wireless kit

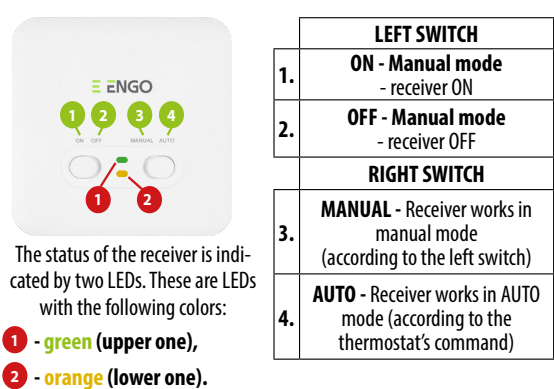


A detailed explanation of the meaning of the LEDs can be found in the table below:

	DESCRIPTION
The green LED lights up	The receiver is connected to the 230V power supply. The receiver can be controlled by thermostat if it is in automatic mode when the right switch is in the AUTO position. The receiver can be started manually when the right switch is in the MANUAL position.
The green LED flashes	The receiver is in the pairing mode and is looking for a signal from the thermostat (then you must activate the "SYNC" parameter in the thermostat).
The green LED is off	The receiver is disconnected from the 230V power supply or the left switch is in the OFF position.
The orange LED lights up	In automatic mode, the receiver received a heating / cooling signal from the thermostat. The receiver was started in manual mode (left ON switch, right MANUAL switch)
The orange LED flashes	The receiver was paired but lost communication with the thermostat due to out of range or low battery in the thermostat. The receiver starts flashing after 40 minutes of time when it does not receive a signal from the thermostat.
The orange LED is off	The receiver does not send a heating / cooling signal.

Connection description for wireless thermostat RF

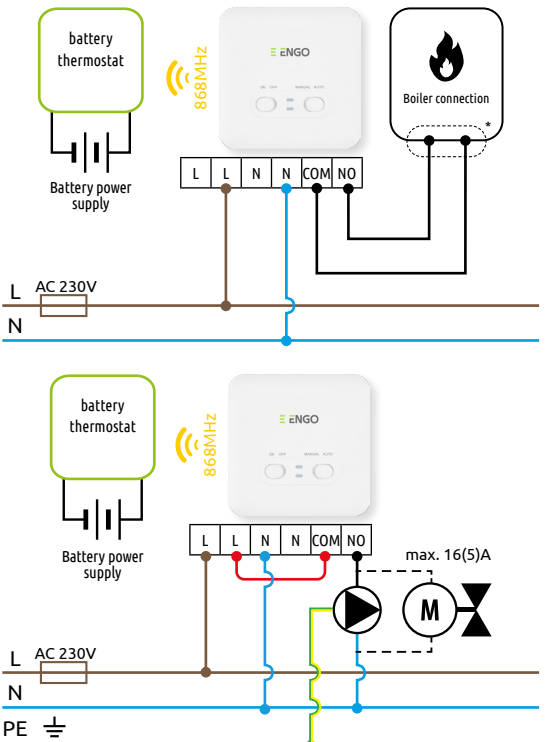


LCD icon description

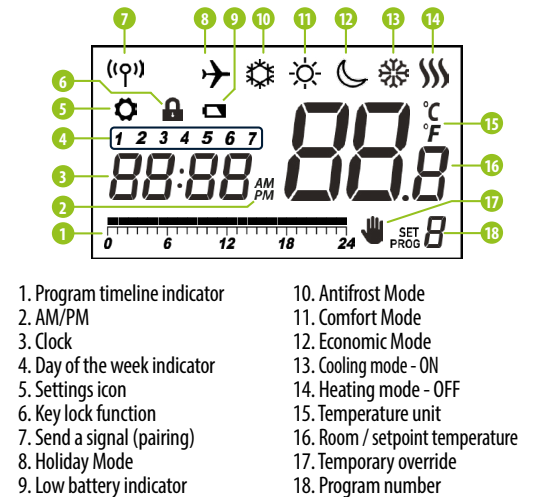

Button description

Button	Function
▼	Change the parameter value down
▲	Change the parameter value up
D	Set the day of the week
H	Set the hour
M	Set the minutes
☀	Comfort temperature
🌙	Economic temperature / Holiday mode
AUTO	AUTO mode / Back button (to go back - press and hold)
PROG	Programming / Program selection
✓	Confirm function
• Reset	Factory Reset


Setting Time / Setting Date

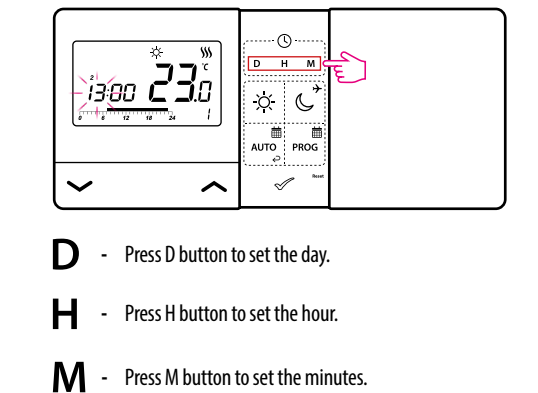

Manual mode - temperature settings


There are several temperature levels at our disposal. Only one temperature level is realized 24 hours a day in manual mode. You can set a different temperature for each level.

- ☀ - Comfort Mode** - in this mode, the thermostat is to maintain a constant day temperature. When the temperature is set manually, e.g. 23 °C, the thermostat maintains it until user switches to another operating mode or set a different temperature, e.g. 21 °C.
- 🌙 - Economic Mode** - in this mode, the thermostat is to maintain the reduced (night) temperature. When the temperature is set manually, e.g. 17 °C, the thermostat maintains it until user switches to another mode or set a different temperature, e.g. 19 °C.




The values of these temperatures are taken into account in the automatic mode (for the first type of schedule -> see next page).

Setting the comfort temperature

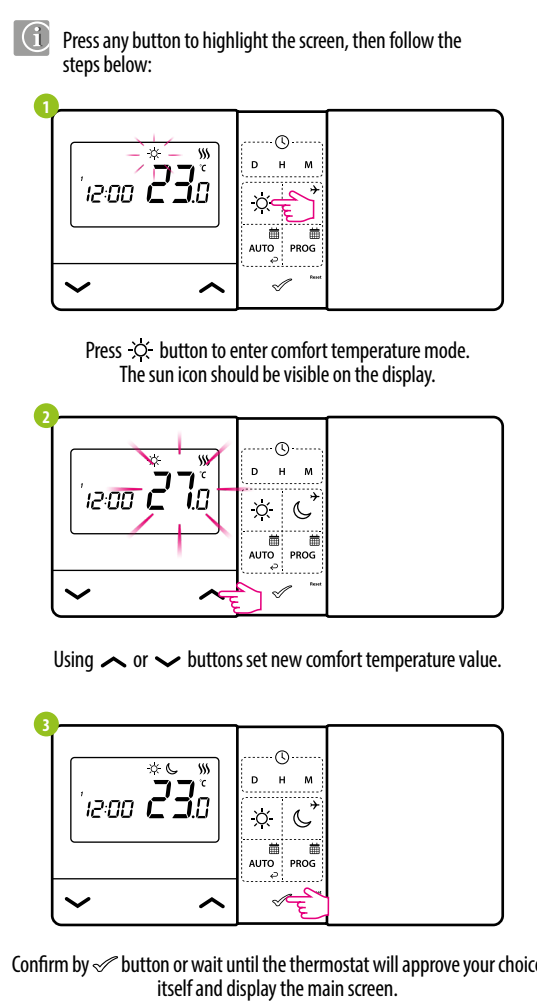

Confirm by ✓ button or wait until the thermostat will approve your choice itself and display the main screen.

Setting the economic temperature

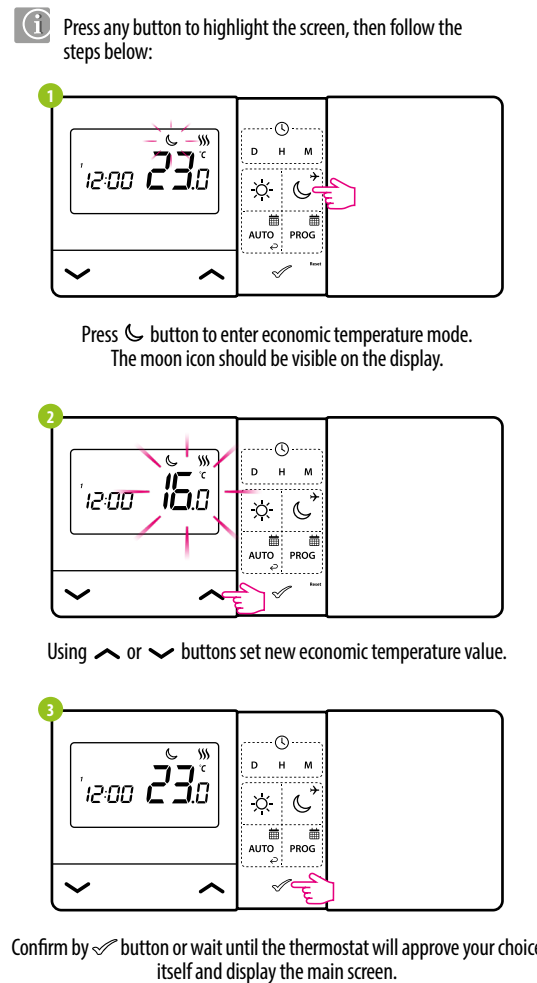


Confirm by ✓ button or wait until the thermostat will approve your choice itself and display the main screen.

AUTO mode - work according to the schedule

AUTO In the automatic mode, the thermostat maintains the set temperature according to the schedule selected by the user. You can choose from 2 types of schedule to manage the temperature during the week.


The first type of schedule (factory set with a time line) and its programming is described below:

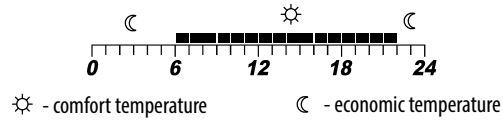


There are 9 programs available. Programs 0-3 are factory programs. Programs 4-9 can be defined by user.

Selection of factory (0-3) programs


i Press any button to highlight the screen, then follow the steps below:

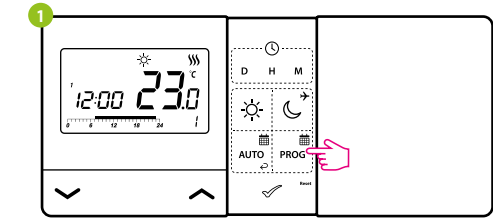

Press **PROG** button to enter the programming mode.

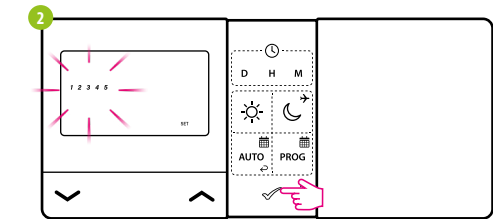


Select the week period using **^** or **v** buttons. Confirm by **✓** button.

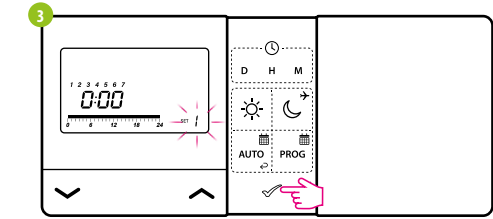


Using **^** or **v** buttons choose program number (0-3). Confirm by **✓** button. The thermostat will proceed to program selection for the next time period.

Choosing and programming (4-9) user programs


i Press any button to highlight the screen, then follow the steps below:

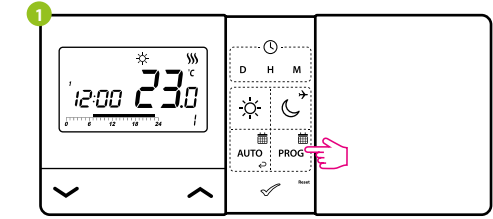


Press **PROG** button to enter the programming mode.

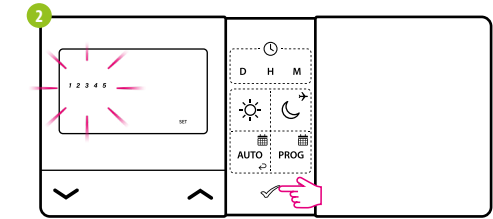

Select the week period using **^** or **v** buttons. Confirm by **✓** button.

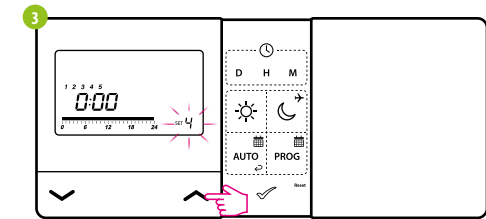


Using **^** or **v** buttons choose program number (4-9).

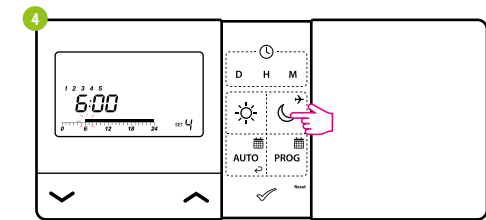


Then - each time you press the sun - ☀ button or moon button - ☾ you move the timeline one hour and assign a comfortable (☀) or economic (☾) temperature. Confirm by **✓** button.

PLEASE NOTE!
Programs should be set for each week days.




The second type of schedule and the programming method is described below:


i Press any button to highlight the screen, then follow the steps below:

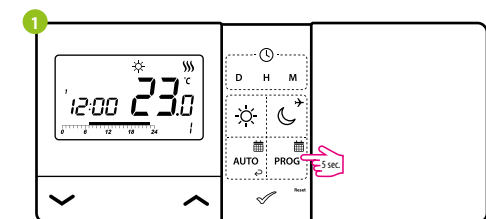


Press **PROG** button for 5 seconds to enter to the schedule programming selection mode.

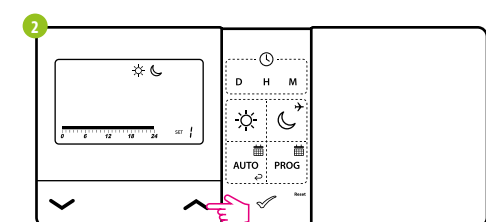


Using **^** or **v** buttons choose the second type of schedule programming.

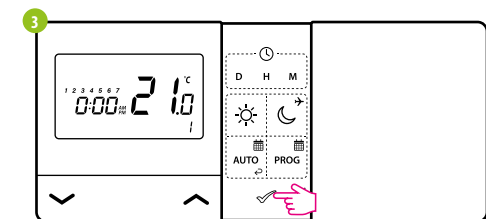


Confirm by **✓** button. Thermostat will return to the main screen saving the second type of schedule programming. The timeline will also disappear.

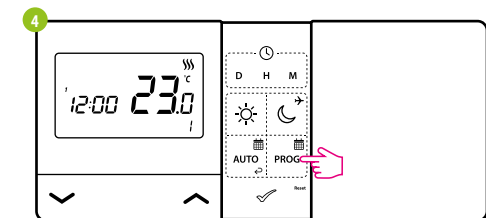


Press **PROG** button to enter the programming mode.

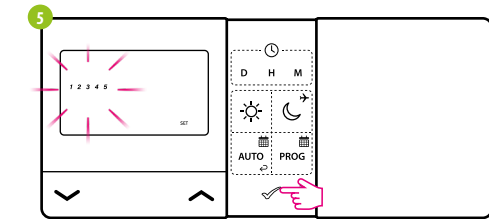

Select the week period using **^** or **v** buttons. Confirm by **✓** button.

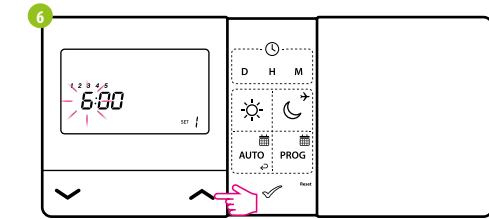

Using **^** or **v** buttons set the program start and then after confirmation by **✓** button, set the minutes. Confirm by **✓** button.

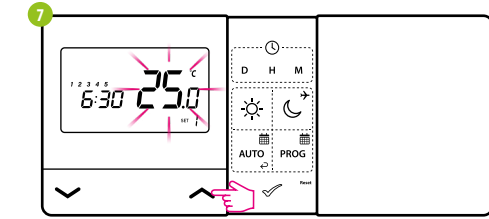


Use **^** or **v** buttons to set the temperature. Confirm by **✓** button. The thermostat will proceed to set the next program (a maximum of 6 programs can be set).


PLEASE NOTE!
Programs should be set for each week days.

Pairing process with the receiver


PLEASE NOTE!
THERMOSTAT IS ALREADY PAIRED WITH THE RECEIVER!

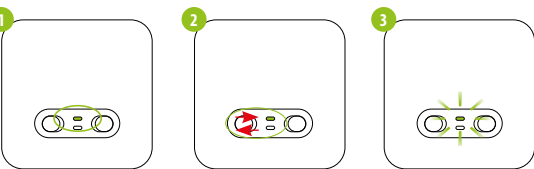


If you want to re-pair the devices with each other, make sure that the receiver is disconnected from the power supply, and the switches on it are in the ON and AUTO positions. Then connect the receiver to the power supply and wait for the green diode to glow continuously. Next, move the left switch to the OFF position and back to the ON position with a quick motion. After all, the green diode will start blinking, which will confirm that the receiver has entered the pairing mode.

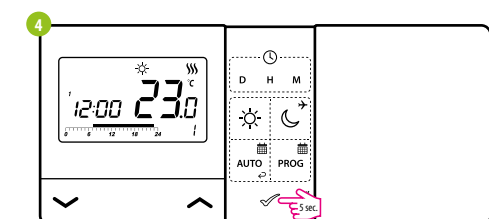


Press **✓** button for 5 seconds.

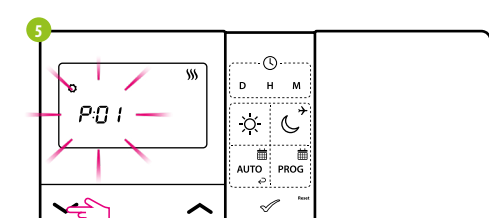


Use **^** or **v** buttons to select SYNC parameter.

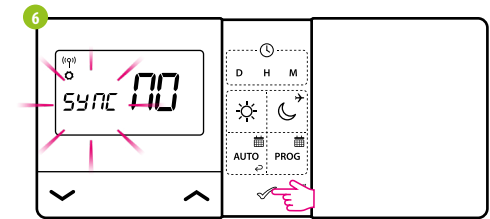


Confirm by **✓** button.

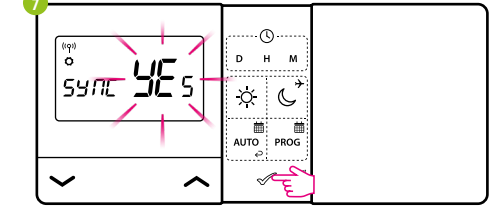


Using **^** or **v** buttons choose YES and start the pairing process on a new frequency by pressing the **✓** button.

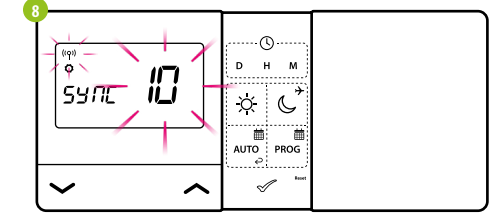


The thermostat started to send a signal to find the receiver (the symbol of the blinking antenna) and started the countdown with the number 10 (min). The pairing process may take up to 10 minutes.

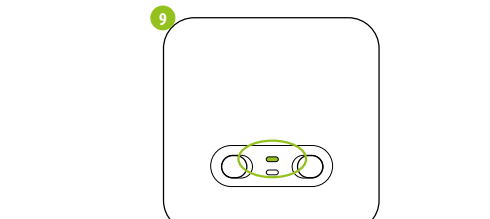

When the green diode on the receiver lights up continuously, the devices have been paired on a new frequency.

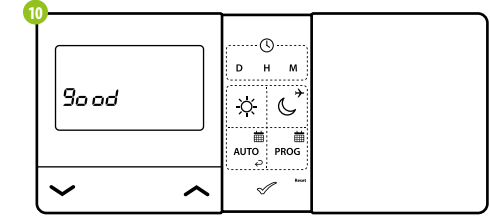


The thermostat will display the message „good“, which means that the devices are successfully paired with each other.

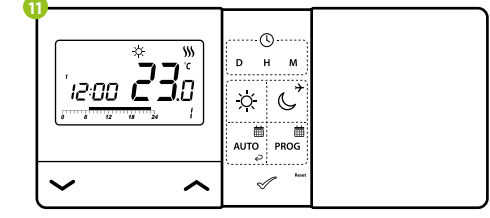


The thermostat will return to the main screen.

WARNING! If the green diode on the receiver has not stopped blinking after 10 minutes, repeat the pairing process taking into account the distance between devices, obstacles and interference.

Installer settings

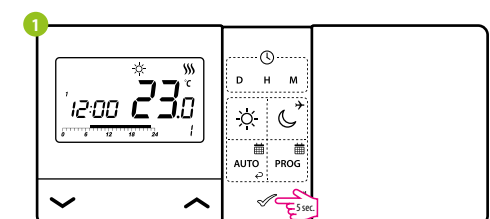

To enter installer parameters press and hold **✓** button for 5 seconds.

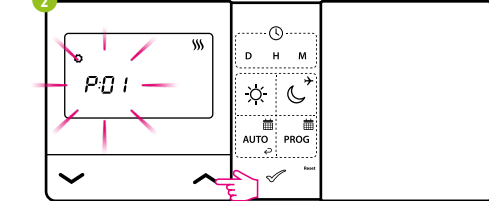

You are in the installer mode. Use **^** or **v** buttons to move between parameters. Enter the parameter by **✓** button. Edit the parameter using **^** or **v** button. Confirm the new parameter value with the **✓** button.

Installer parameters

Pxx	Function	Value	Description	Default value
P01	Heating/Cooling Selection	☀	Cooling	☾
		☾	Heating	
P02	Control method temperature	1	SPAN $\pm 0,25^{\circ}\text{C}$	1
		2	SPAN $\pm 0,5^{\circ}\text{C}$	
		3	TPI for Underfloor Heating	
		4	TPI for Radiators	
		5	TPI for Electrical Heating	
P03	Display temperature resolution	0,5 $^{\circ}\text{C}$ 0,1 $^{\circ}\text{C}$	This parameter specifies the accuracy of the displayed (measured) temperature.	0,5 $^{\circ}\text{C}$
P04	Offset temperature	-3,5 $^{\circ}\text{C}$ to + 3,5 $^{\circ}\text{C}$	If the thermostat indicates wrong temperature, you can correct it by $\pm 3,5^{\circ}\text{C}$	0 $^{\circ}\text{C}$
P05	Relay type	NO NC	Normally Open type of relay Normally Closed type of relay	NO
P06	Clock format	24h 12h	24 hour 12 hour	24h
P07	Temperature Scale	$^{\circ}\text{C}$ $^{\circ}\text{F}$	Celsius Fahrenheit	$^{\circ}\text{C}$
P08	Minimum setpoint	5 $^{\circ}\text{C}$ - 34,5 $^{\circ}\text{C}$	Minimum heating / cooling temperature that can be set	5 $^{\circ}\text{C}$
P09	Maximum setpoint	5,5 $^{\circ}\text{C}$ - 35 $^{\circ}\text{C}$	Maximum heating / cooling temperature that can be set	35 $^{\circ}\text{C}$
P10	Key sound	NO YES	Off On	YES
P11	PIN Code	NO PIN	Disabled Enabled	NO
P12	Require a PIN to unlock the keys every time	NO YES	Function disabled Function enabled	YES
		NO YES	No action Factory Reset	
CLR	Clear settings factory reset	NO YES	No action Factory Reset	NO
*Only for RF thermostat				
SYNC	Pairing function with receiver (SYNC)	NO YES	Function disabled Function enabled	NO
		NO YES	Function disabled Function enabled	

Technical specification

Wired thermostat

Thermostat supply	2 x AA batteries
Rating max	5 (3) A
Outputs	Voltage-free NO/COM relay
Temperature range	5 - 35 $^{\circ}\text{C}$

Wireless thermostat (868 MHz)

Thermostat supply	2 x AA batteries
Receiver supply	230 V AC 50 Hz
Receiver rating max	16 (5) A
Receiver outputs	Voltage-free NO/COM relay
Temperature range	5 - 35 $^{\circ}\text{C}$